


Clean Flow™ Inline A/C Drain Treatment

Installation Instructions

1. If condensate drain PVC piping is already in place, remove a 3.25" section of the piping in a flat, supported location AFTER the P-trap. The Clean Flow™ Inline A/C Drain Treatment unit must be installed in a horizontal manner. The weight of the Clean Flow™ Inline A/C Drain Treatment unit is low enough to be supported by short spans of PVC pipe. Always test the installation before solvent welding.
2. Apply PVC primer to the ends of the PVC piping and to the inlet and outlet of the Clean Flow™ Inline A/C Drain Treatment unit housing.
3. Apply PVC cement to the ends of the PVC piping.
4. Insert the PVC piping into both ends of the Clean Flow™ Inline A/C Drain Treatment unit housing.

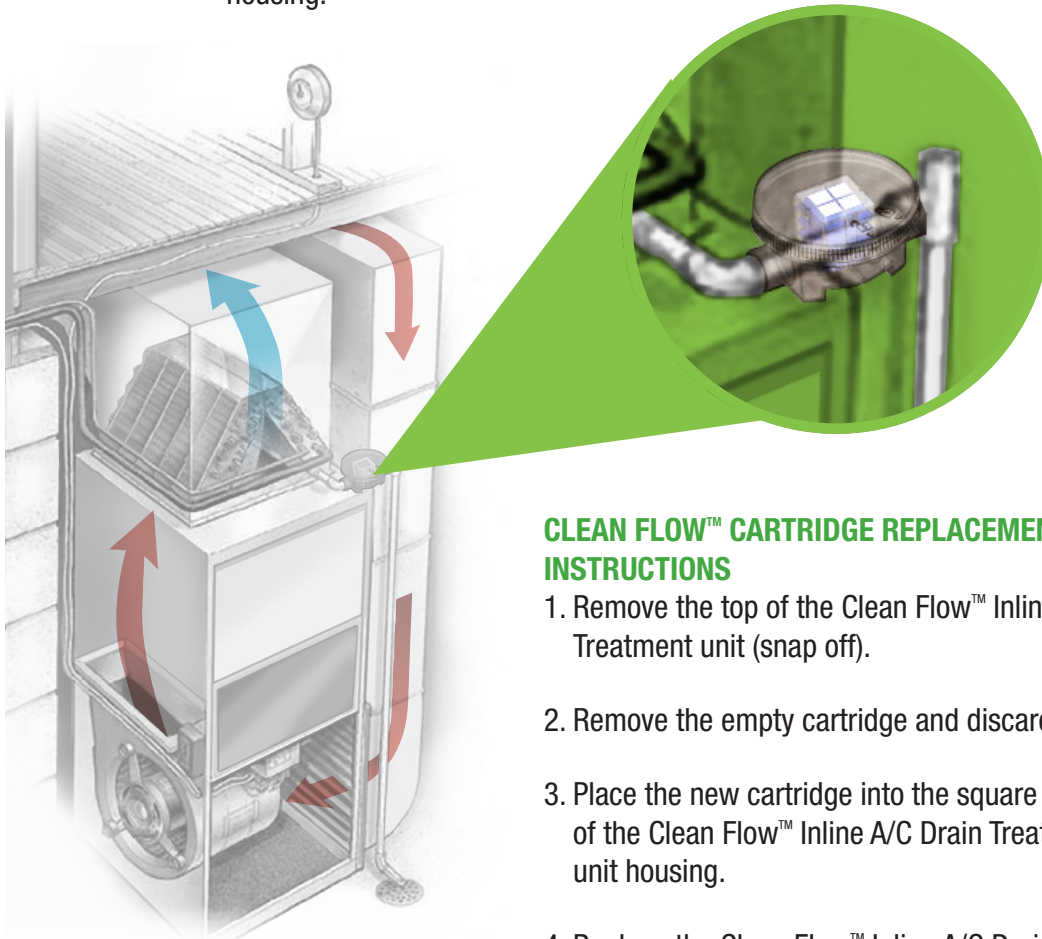

CLEAN FLOW™ CARTRIDGE REPLACEMENT INSTRUCTIONS

1. Remove the top of the Clean Flow™ Inline A/C Drain Treatment unit (snap off).
2. Remove the empty cartridge and discard.
3. Place the new cartridge into the square bottom section of the Clean Flow™ Inline A/C Drain Treatment unit housing.
4. Replace the Clean Flow™ Inline A/C Drain Treatment unit housing cap (snap on).

NOTE: Each Clean Flow™ Cartridge will provide treatment for up to 6 months.

CAUTION: KEEP OUT OF REACH OF CHILDREN. Avoid contact with eyes, skin or mucous membranes. Protect eyes and other portions of the body when using. In case of eye contact, flush with water for 15 minutes and seek medical attention. For skin contact, wash thoroughly with water. Seek medical attention if irritation develops or persists.

LIMITED WARRANTY: This product is warranted to be free from defects in workmanship and material for one year from the date of purchase.

MANUFACTURED FOR:
SimpleAir Care, LLC
P.O. Box 357
Columbus, TX 78934
855.342.3732
SimpleAirCare.com